

SEM1-WL-2 Smart Power Sensor Quick Guide




Please scan the QR code to obtain the electronic version of the quick guide and user manual

Add: No. 52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, 314001, China.
Tel: 0086-573-83698881/83698882
Fax: 0086-573-83698883
Web: www.eastron.com.cn


Requirement for Power Sensor

System Networking

Scenario 1 - for Sigenergy Inverters with WLAN

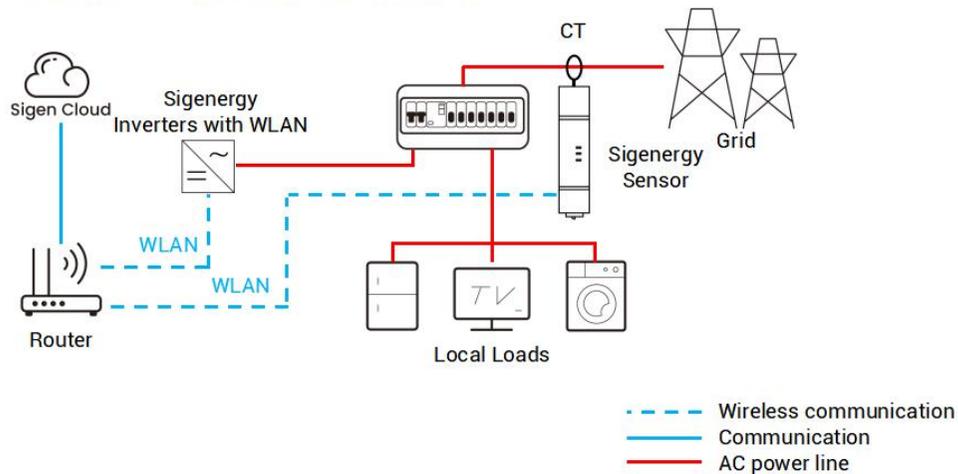

Scenario 2 - for Sigenergy Inverters with RS485

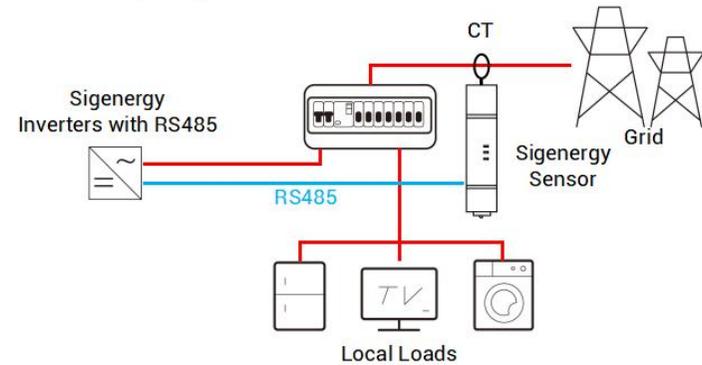

Notes:

1. For the installation location and wiring of the power sensor, please consult our engineer.
2. For voltage sampling, if the grid voltage is $\leq 277V$, you can connect the wires directly;
3. power sensor include CTs, which no separate purchase required. If CTs are purchased separately, they must meet the following requirements:



CT	Primary rated current I_n/A	\geq Measuring current
	Secondary rated current I_o/mA	40mA
	Accuracy	Class 0.5
	The default CT ratio of the power sensor	120A/40mA

Sampling Voltage $\leq 277V_{ac}$ (1P2W)

Wiring Guide


Scenario 1 - for Sigenergy Inverters with WLAN

Scenario 2 - for Sigenergy Inverters with RS485

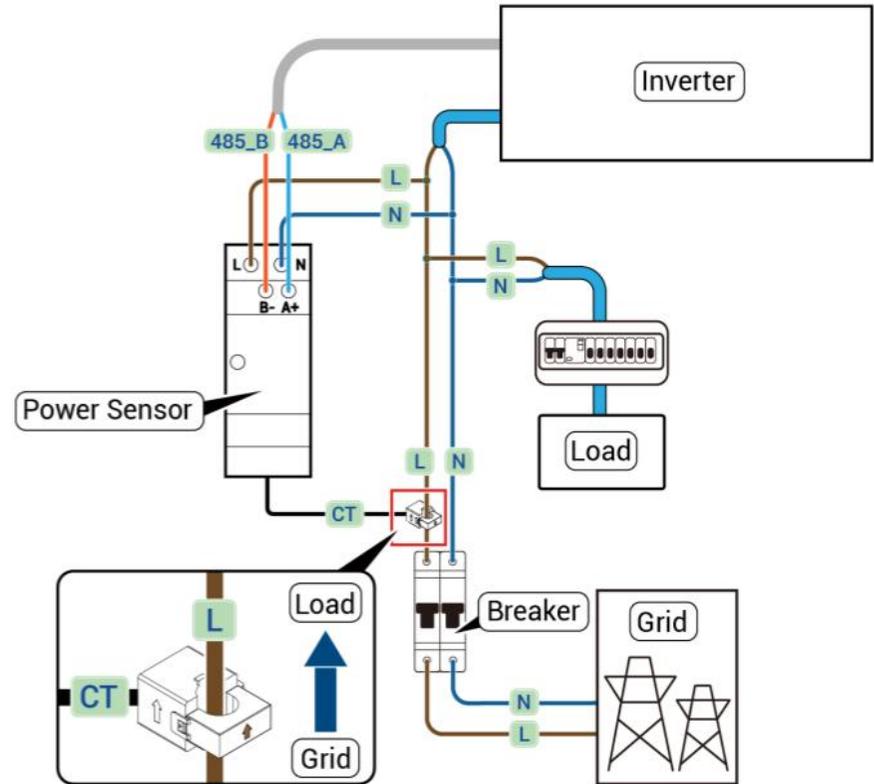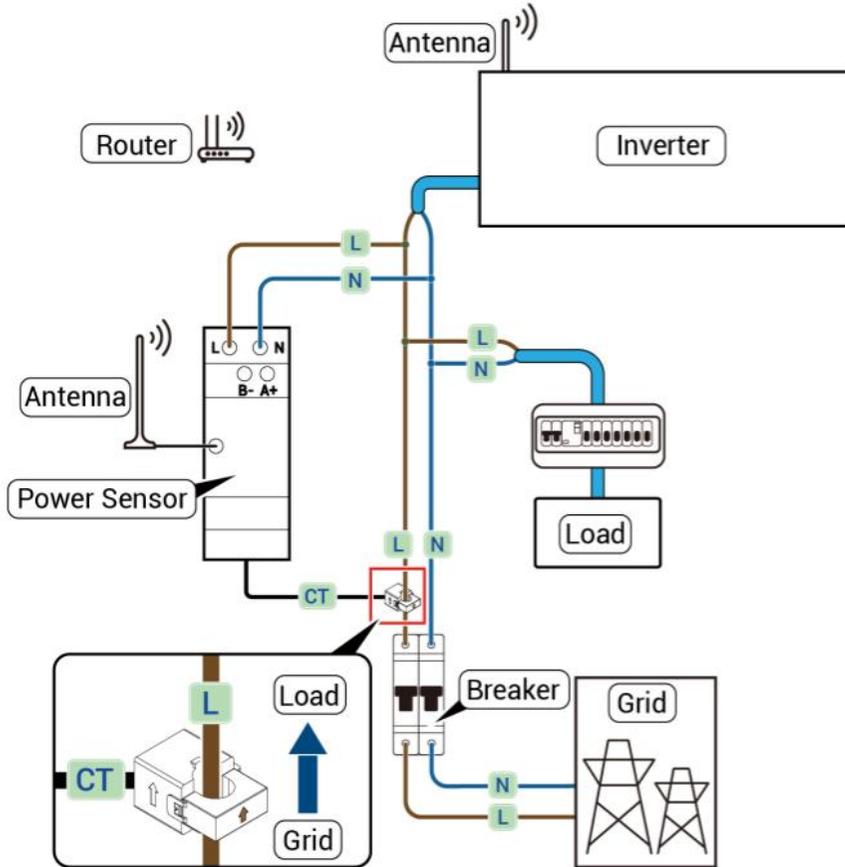

- Notes:**
1. Sampling voltage $\leq 277V_{ac}$, correct connect the CT.
 2. During installation, ensure that the L and N wires are correctly connected.
 3. Auto-adaptive CT Polarity and Phase Orientation.
 4. Power sensor require scircuit breaker for protection, otherwise the voltage sampling wires need to be connected with a fuse in each phase. Recommended fuse specification: \geq measuring voltage/1A.
 5. Please refer to the "Definition of button and LEDs"
 6. The antenna is designed to be plug-and-play for easy installation. Under open-field conditions, the communication distance can reach up to 80 meters.

Definition of button and LEDs

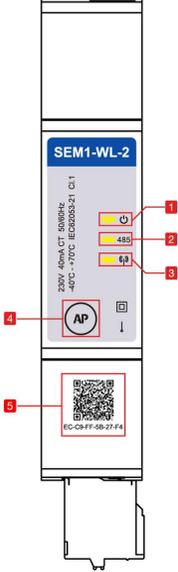Interface	Definition	Introduction
	<p>1.Power LED (Red)</p>	<p>1.Stay on: Light up when the meter is powered on with no load. 2.Flashing: Blinks when a load is connected.</p>
	<p>2.RS485 LED (Green)</p>	<p>1.Stay on: During the OTA upgrading. 2.Flashing: Blinks when the meter is communicating normally.</p>
	<p>3.WLAN LED (Blue)</p>	<p>In the AP mode: 1.Stay on: Light up when the meter enter the AP mode. 2.Flashing: Blinks when the meter is disconnected to the network. 3.Off: Light off after the meter is connected to the network.</p>
		<p>In the station mode: 1.Stay on: Light up when the WLAN module malfunctions. 2.Flashing: Blinks during the meter wireless communicating.</p>
	<p>4.Key</p>	<p>1. Press and hold for 3 seconds to enter/exit AP mode; 2. Press and hold for 10 seconds to reset communication parameters.</p>
	<p>5.QR code</p>	<p>Used for WLAN network configuration</p>

SEM1-WL-2功率传感器 快速安装指南



请扫描二维码获取电子版快速安装指南和使用说明书

地址: 浙江省嘉兴市南湖区七星街道东进路 52 号

电话: 0086-573-83698881/83698882


传真: 0086-573-83698883

网站: www.eastron.com.cn


功率传感器要求

系统组网图

场景1 - 配合思格WLAN逆变器

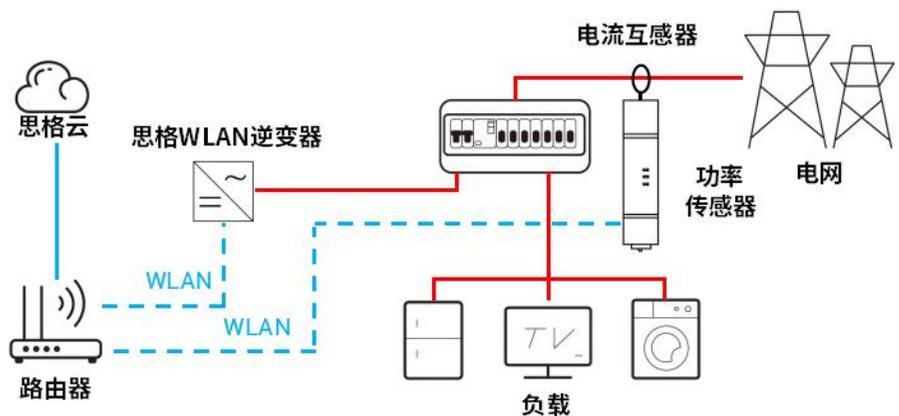

场景2 - 配合思格RS485逆变器

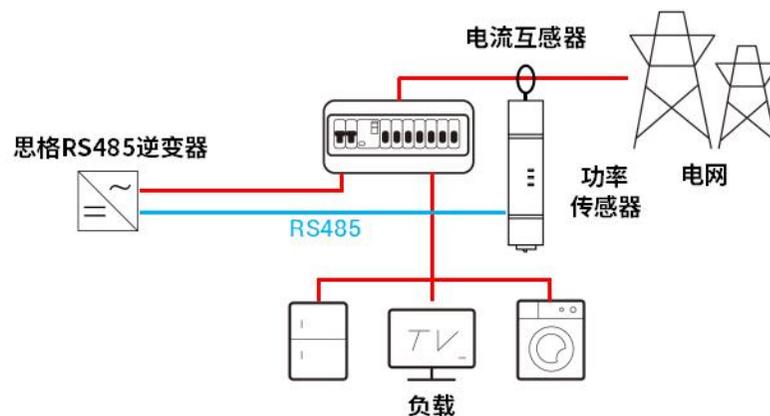

- - - 无线通信
— 信号线
— 交流线


注意:

- 1.功率传感器安装位置和接线, 请参考系统组网图和接线指导, 或者咨询我司工程师。
- 2.电网电压 $\leq 277V_{ac}$, 功率传感器可直接接线进行电压采样;
- 3.功率传感器配备CT, 无需购买。若用户自行采购CT,则必须符合以下要求:


CT	一次侧额定电流 I_n/A	\geq 测量电流
	二次侧额定电流 I_o/mA	40mA
	采样精度	0.5级
	功率传感器默认CT变比	120A/40mA

单相两线 (1P2W) 接线指导

场景1 - 配合思格WLAN逆变器

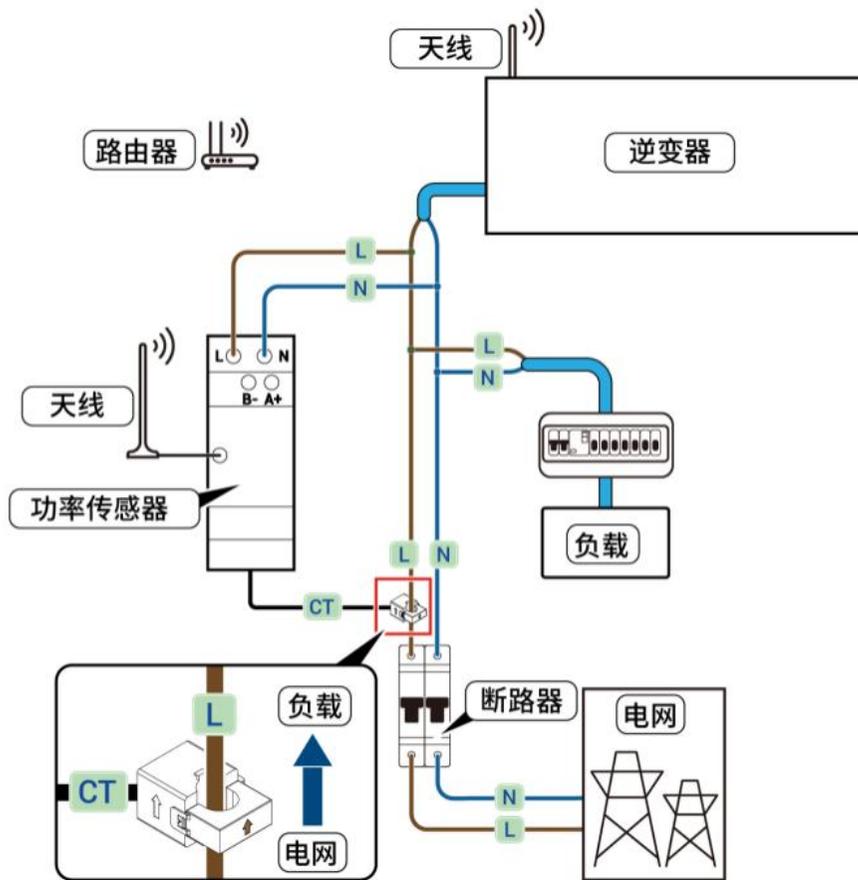


场景2 - 配合思格RS485逆变器

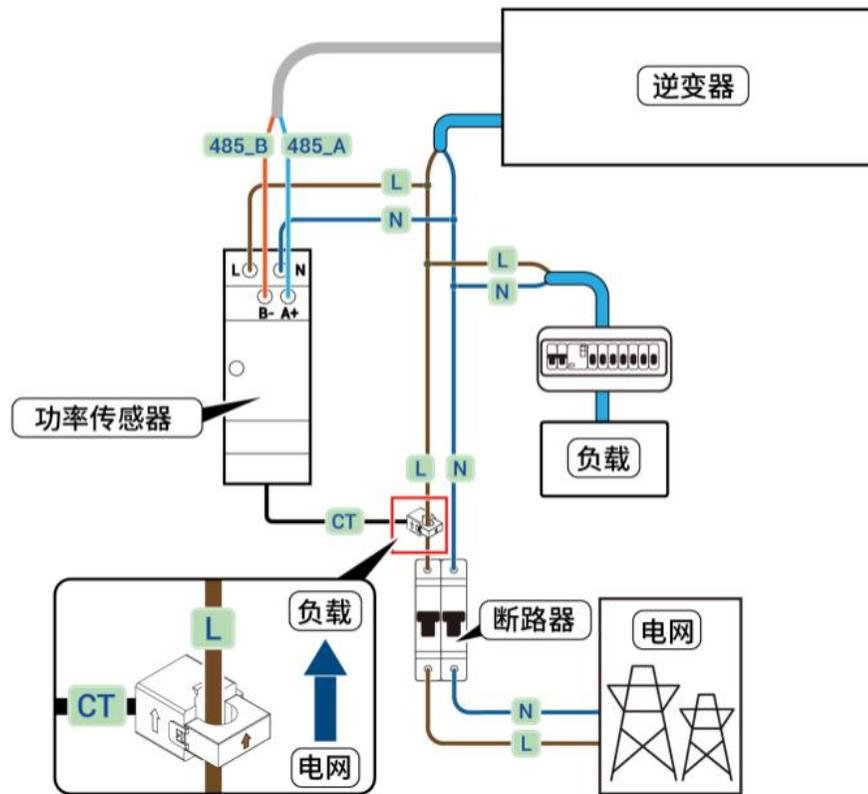

注意:

1. 请参考指导进行接线。
2. 安装时需确保L和N线连接正确。
3. CT方向及相位可自适应。
4. 功率传感器前端需要安装断路器用于短路保护，否则电压采样线前端需要串接熔丝进行保护，熔丝推荐规格： \geq 额定一次侧电压/1A。
5. 请参考“按键与LED的定义”。
6. 天线为可插拔式，方便安装，空旷环境下通信距离可达80米。

按键与LED定义

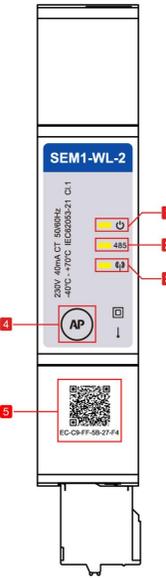界面	定义	描述
	1.电源指示灯 (红色)	1.常亮: 电表在无负载状态下通电时点亮。 2.闪烁: 接入负载时指示灯持续闪烁。
	2.RS485通讯指示灯 (绿色)	1.常亮: 表示设备正在进行在线升级。 2.闪烁: 电表正常通信时指示灯持续闪烁。
	3.WLAN通讯指示灯 (蓝色)	AP模式下的指示灯状态说明: 1.常亮: 当电表进入AP模式时, 指示灯持续点亮。 2.闪烁: 当电表未连接到网络时, 指示灯持续闪烁。 3.熄灭: 当电表成功连接至网络后, 指示灯关闭。
		Station模式下的指示灯状态说明: 1.常亮: 当WLAN模块发生故障时, 指示灯持续点亮。 2.闪烁: 当电表正在进行无线通信时, 指示灯持续闪烁。
	4.按键	1.长按3秒: 进入或退出AP模式。 2.长按10秒: 重置通信参数。
	5.配网二维码	用于配置WLAN网络